
Do you know your clearance requirements?

Working with overhead anchorage points.

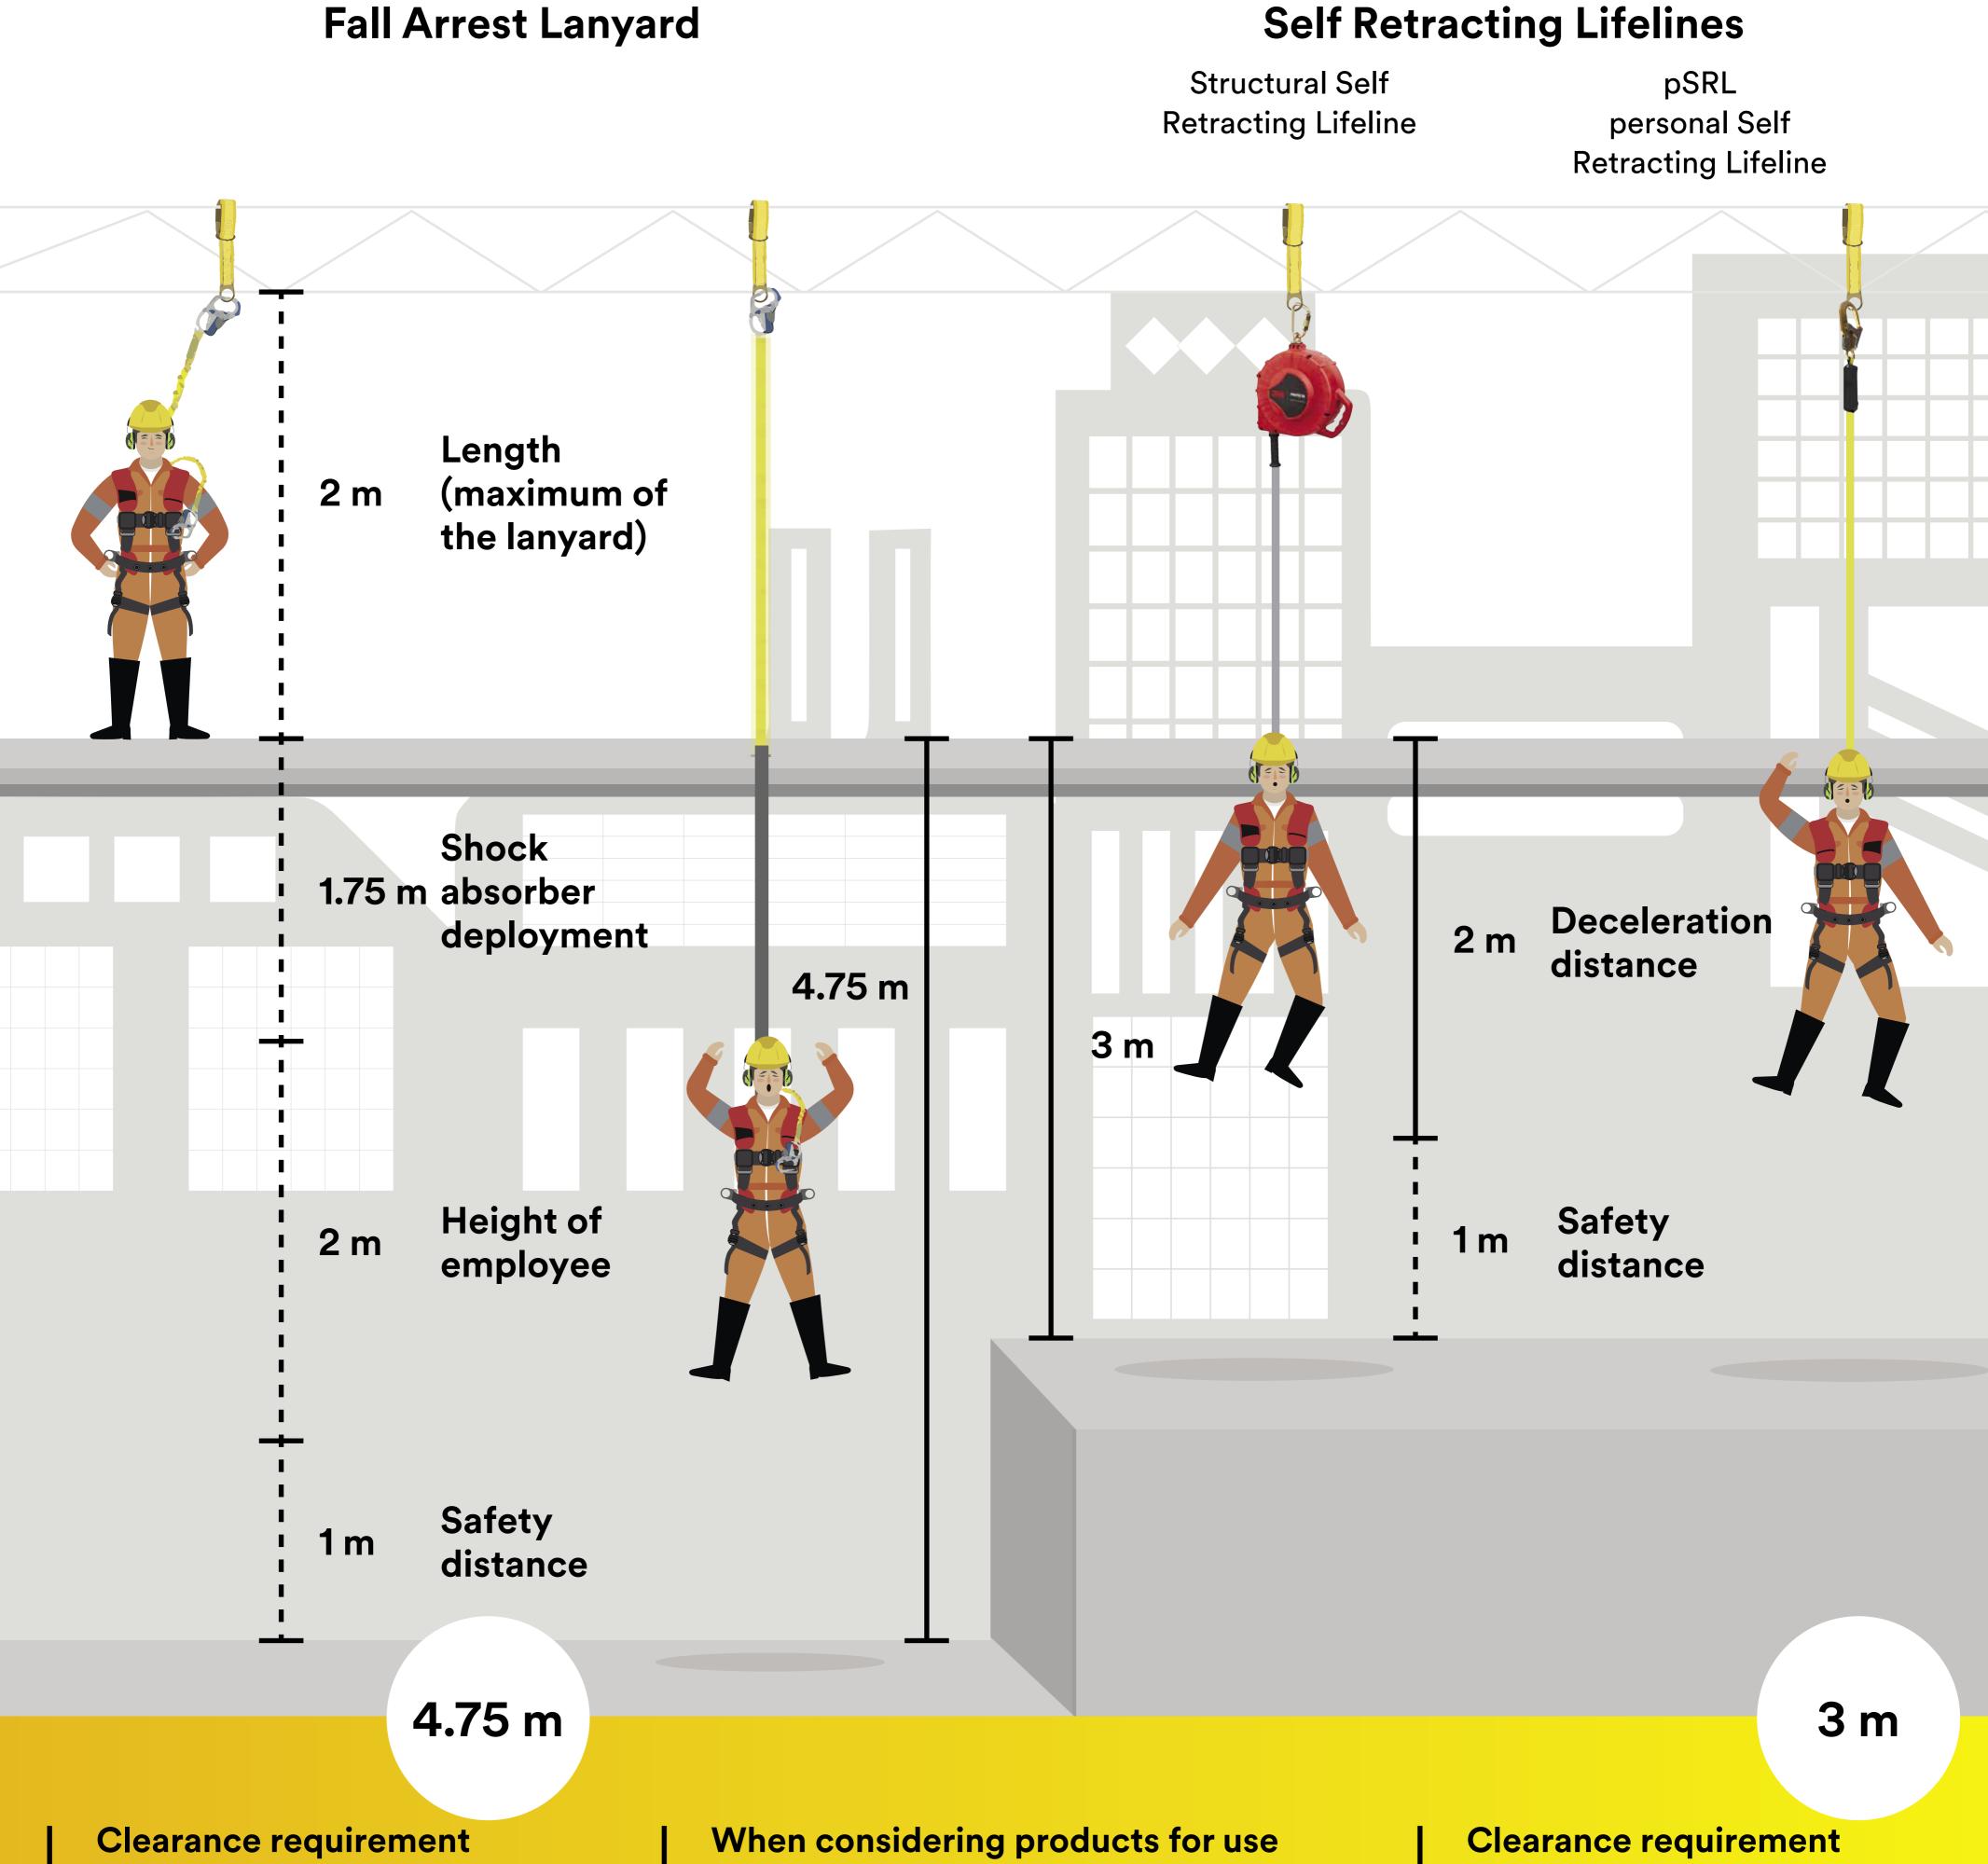

Clearance requirement from the work surface for a Fall Arrest Lanyard.*

Energy absorbers.

When considering products for use especially where fall clearances are reduced, a SRL or pSRL can stop and decelerate a user falling from an overhead anchorage in a lesser distance, compared to a Fall Arrest lanyard.*

Clearance requirement from the work surface for a structural or personal Self Retracting Lifeline.*

CE Retractable type fall arresters.

*Always check the User Instructions of the specific device to properly understand the required fall clearance for safe working clearances.

© 3M 2022. 3M is a trademark of 3M Company.

RG12 8HT, UK